



MANUFACTURING, INC.

Receiver ECO

Codes

Codes and most
common problem
explanations

S.D.P. Manufacturing, Inc. is continually attempting to make product improvements. S.D.P. Manufacturing, Inc. reserves the right to make changes or additions to any product without incurring any obligation whatsoever to make such changes or additions to product previously sold. This manual is subject to change without notice!

S.D.P. Manufacturing, Inc.
400 Industrial Drive
Dunkirk, IN 47336
Email: sales@sdpmfg.com
Web Site: www.sdpmfg.com

ECO CODES

Problems and Explanations

4100 Codes

Code	Explanations
ECO1	Transmitter Is off or in wrong position – Possibly needs synced
ECO2 – ECO8	Voltage is not being correctly sensed by receiver
ECO9 – ECO12	Joystick is unplugged or damaged
ECO13 – ECO14	Bad Rheostat
ECO15	Incompatible Hardware
ECO16	Auger switch is out of neutral position
ECO17	N/A
ECO18	Stow switch wires not connected – check the harness

5500 Codes

Code	Explanations
ECO1	Transmitter is turned off or out of function position
ECO2	Horn Fault – Sensor is looking for the horn
ECO3	Light Fault - Sensor is looking for the light
ECO4	Dump Valve Fault – Sensor is looking for the dump valve
ECO5	Joystick is unplugged or damaged
ECO15 – ECO16	Rheostat control is damaged
ECO17 – ECO18	Switch for auger control is damaged
ECO19 – ECO21	Joystick is unplugged or damaged